



1. Click the right mouse button to pop up a menu, click "system setup".

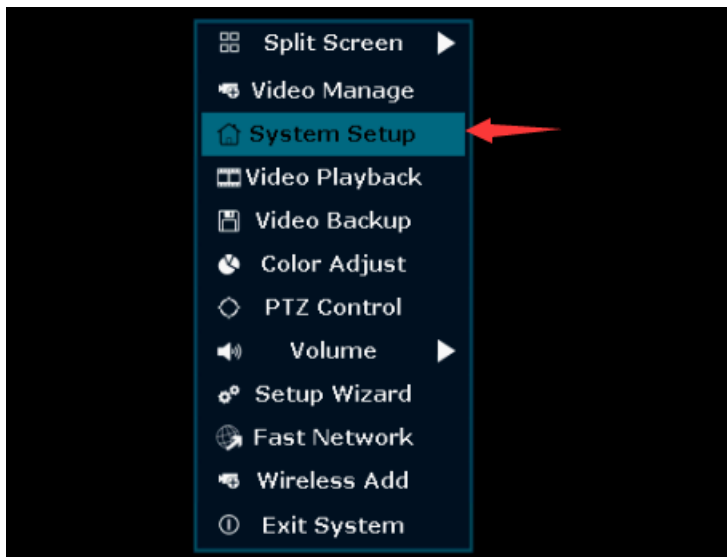

2. Click "system admin"----user----add user

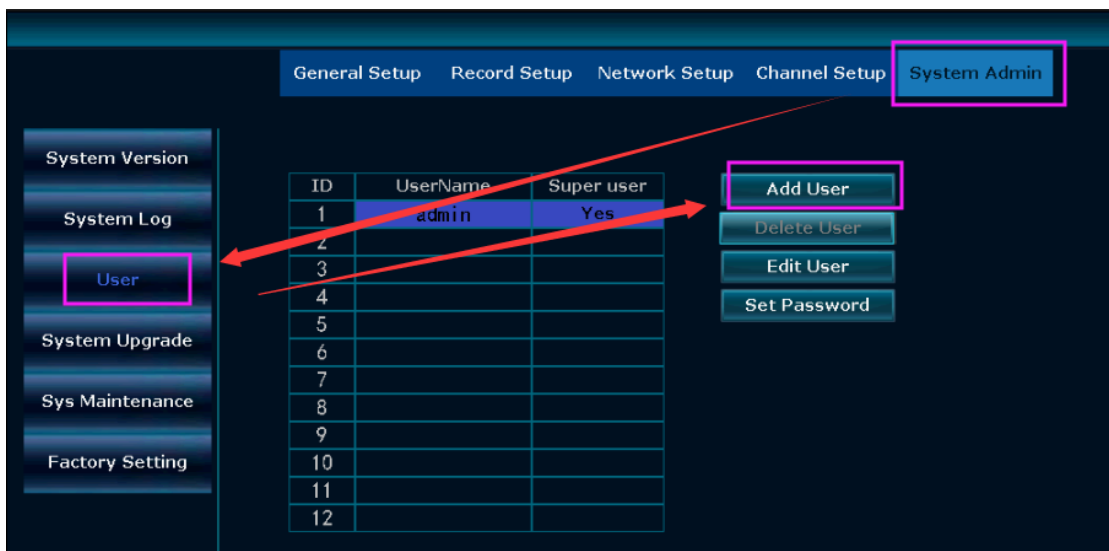

3. Set up a user, and which permissions are granted to the user, click OK to save after setting, and you can log in to the NVR with this account next time

System Version

System Log

User

System Upgrade

Sys Maintenance

Factory Setting

Add User

Username

Password

Password length (up to 12 characters)

Repeated

All

Video Playback

PTZ Control

Setup Wizard

Volume

System Setup

remote

Config

Playback

Ok

Cancel